

avocor

MOBILE STAND USER MANUAL

for model AVC-STND1

TABLE OF CONTENTS

Compliance Information..... 2

Parts 2

Step 1: 3

Step 2: 4

Step 3: 5

Step 4: 5

Step 5: 6


Step 6: 6






Step 7: 7

COMPLIANCE INFORMATION

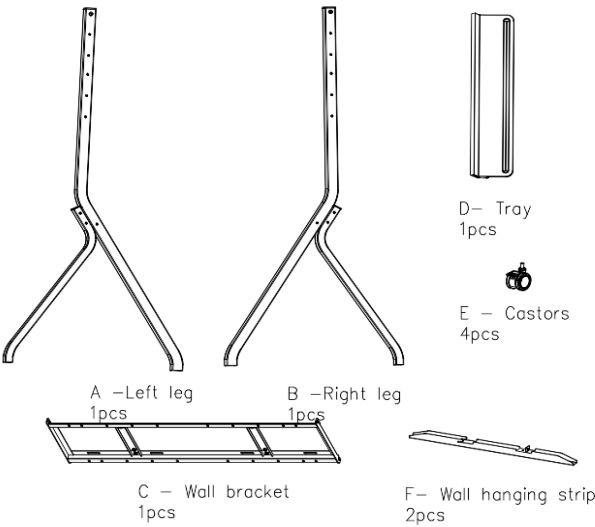To ensure the stand is used correctly and safely, please read this manual carefully before installation. This model is recommended to be used for up to 105-inch panels. Maximum load capacity: 100KG.

PARTS



Cross recessed pocket hex head screw	M8x25	10pcs	
M12 spring pad	20x12.5	4pcs	
M5 Screw	M5x15	2pcs	
Adjustable wrench (customer provided)	-	1pcs	
Phillips screwdriver (customer-provided)	-	1pcs	

STEP 1:

Adjust the wheel to the brake state and screw it into the leg (Figure 1).

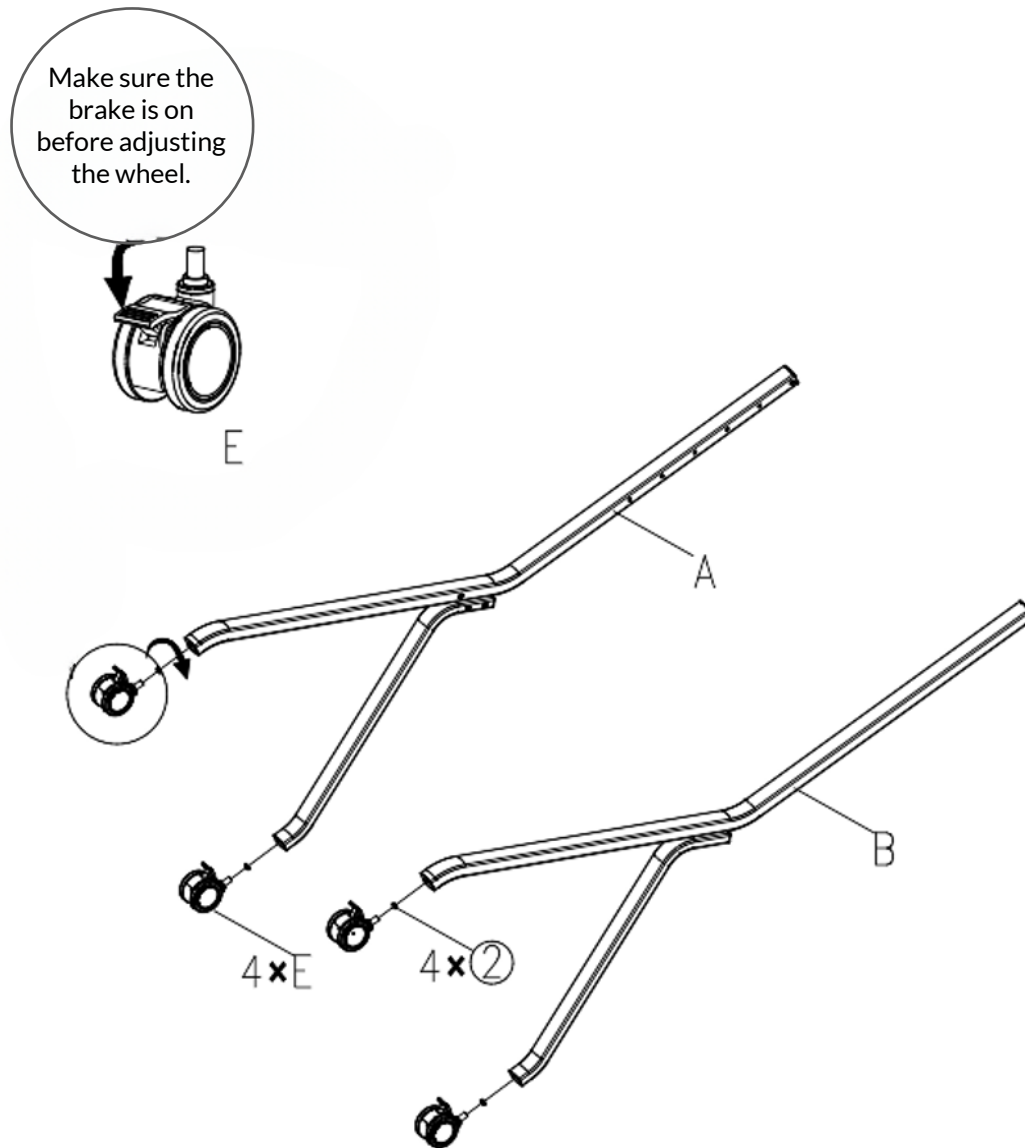


Figure 1.

STEP 2:

Attach the wall bracket to the end leg (Figure 2).

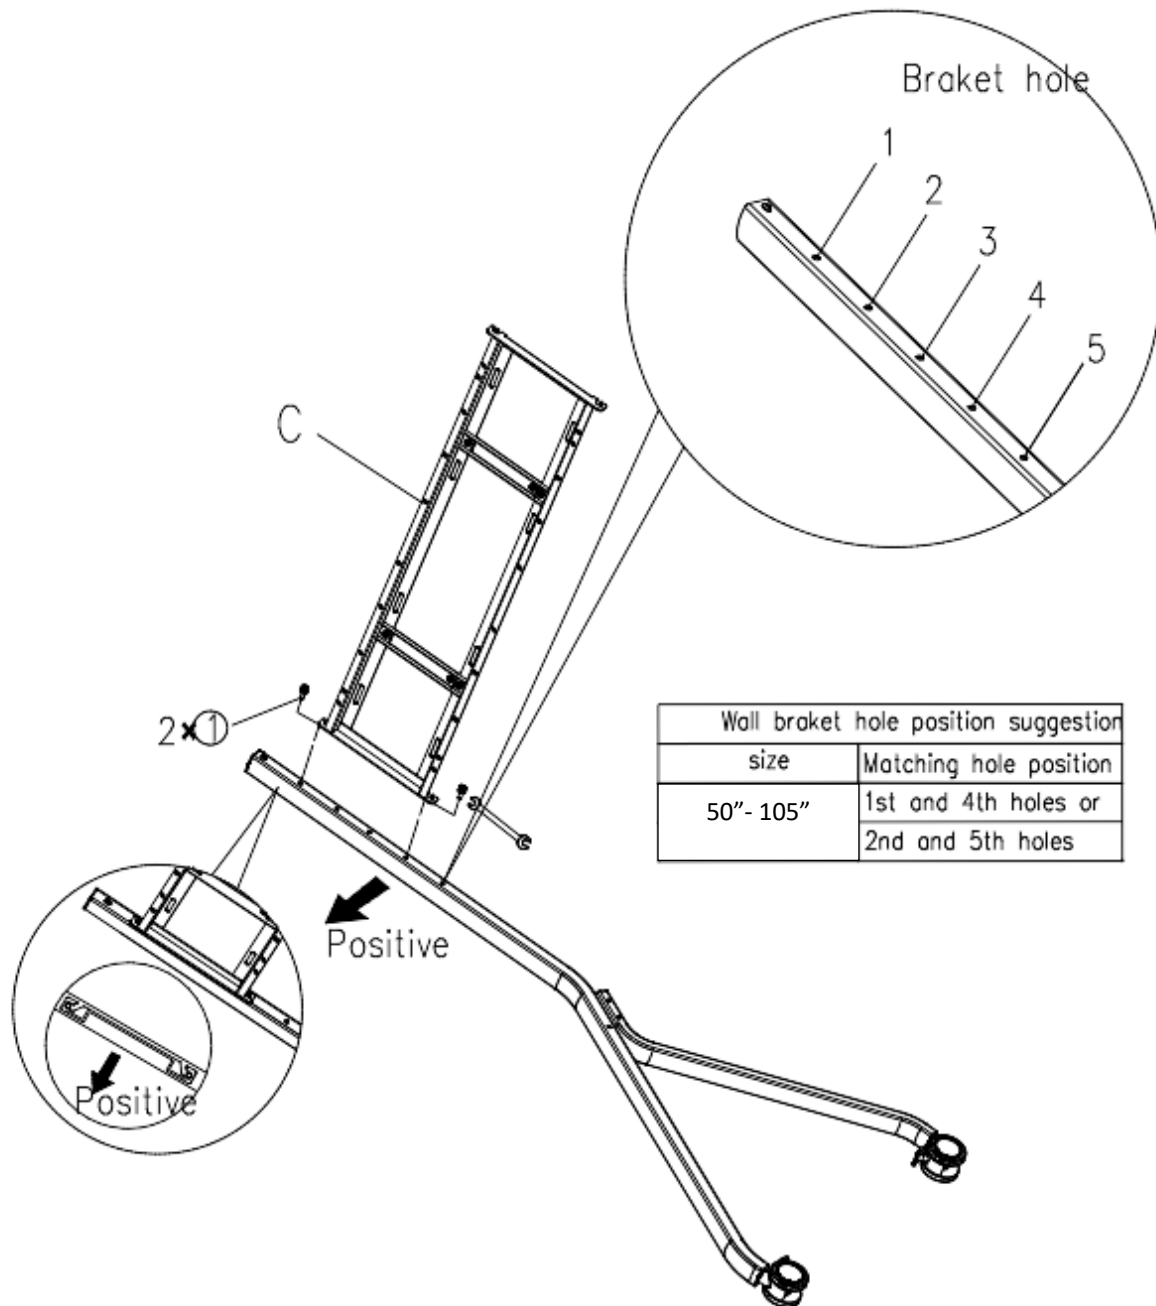


Figure 2.

STEP 3:

Attach the other leg on the other end of the wall bracket (Figure 3).

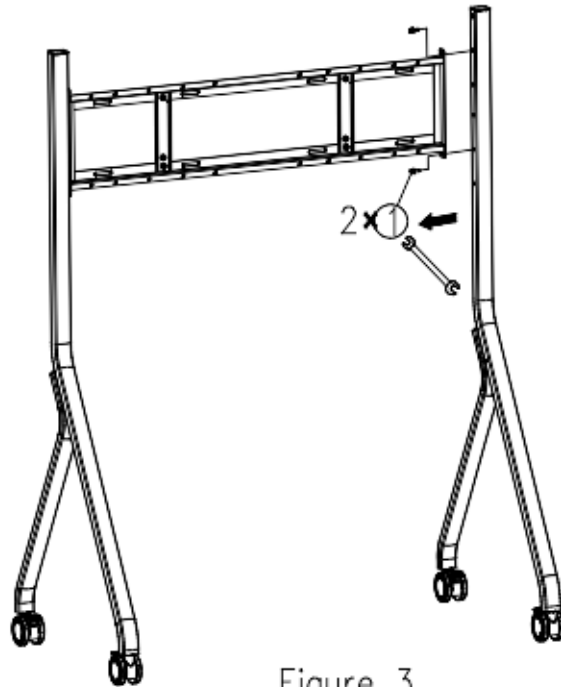


Figure 3.

STEP 4:

Assemble the tray between the two legs (Figure 4).


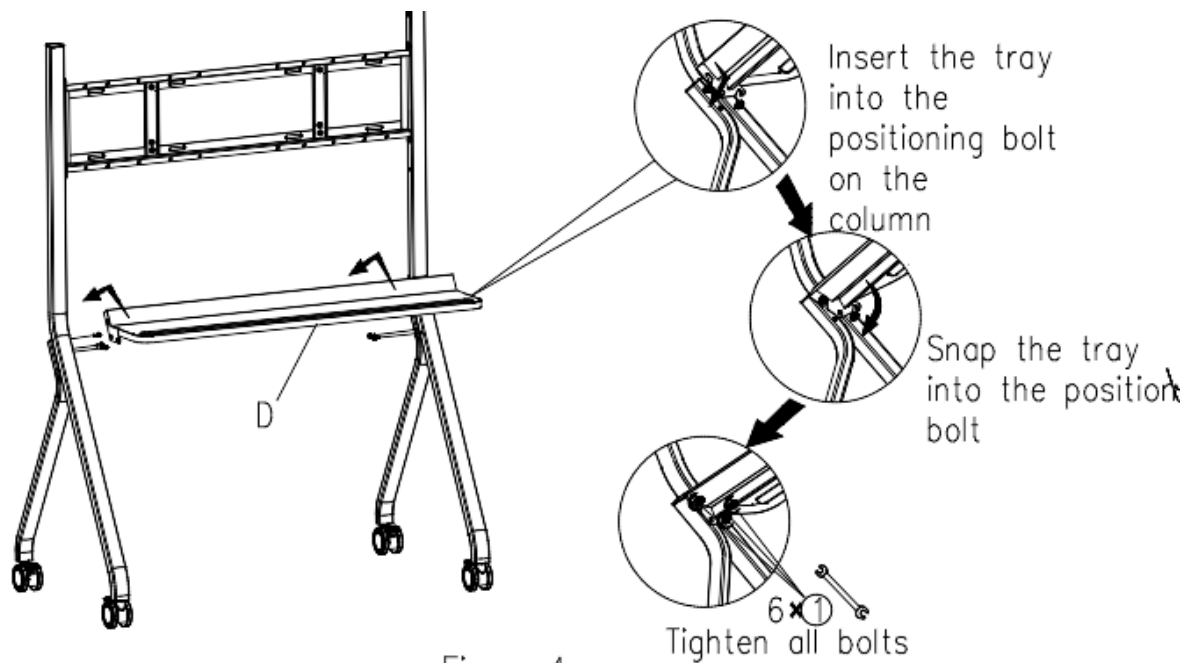


Figure 4.


STEP 5:

According to the actual requirements of the panel, secure the wall hanging strip to the machine (Figure 5).

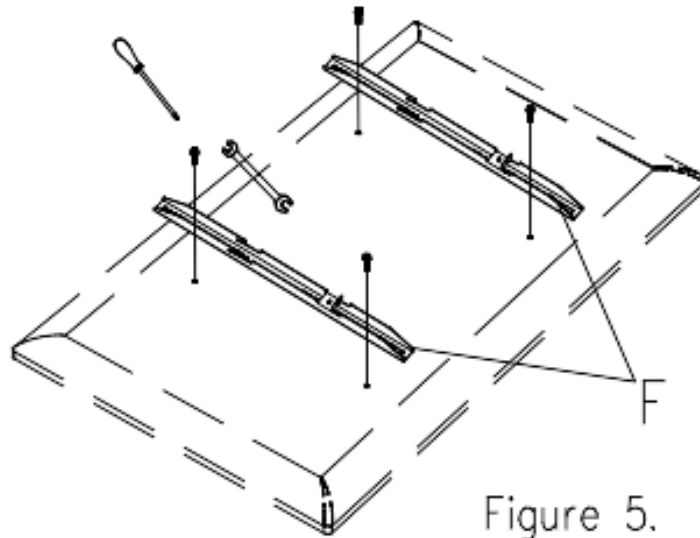

STEP 6:

The assembled display should be hung on the wall bracket, and the safety screw of the wall hanging strip should be locked (Figure 6).

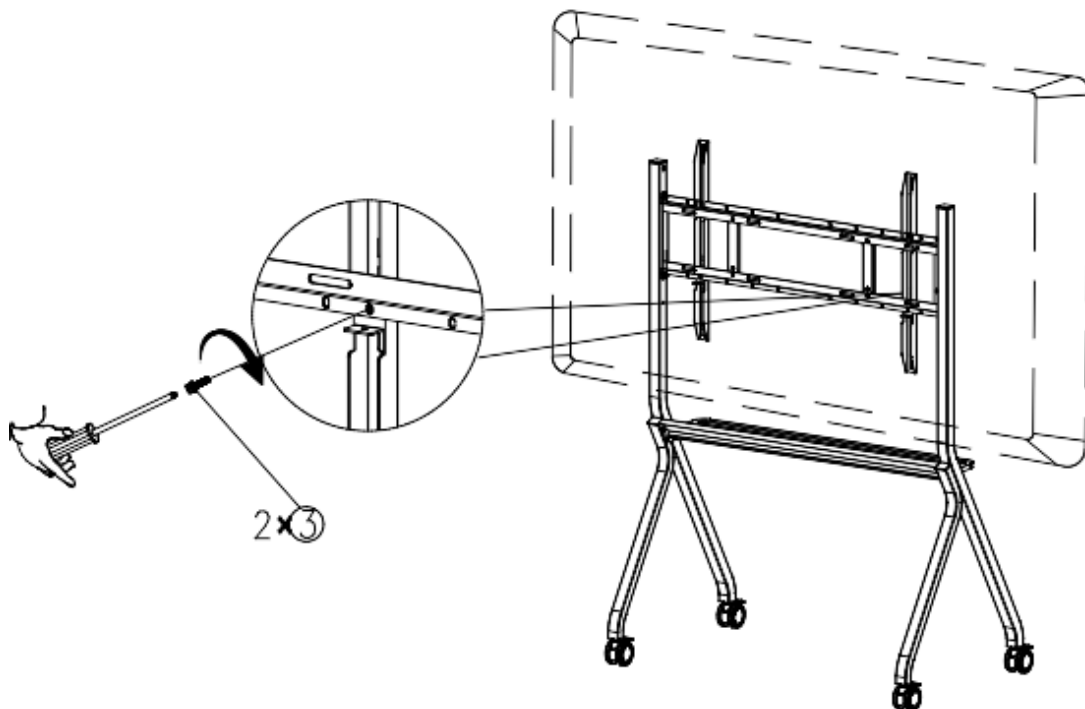

STEP 7:

Done.

